

Ram ProMaster City

MAINTENANCE SCHEDULES - NAFTA

Your vehicle is equipped with an automatic oil change indicator system. The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance. Based on engine operation conditions, the oil change indicator message will illuminate. This means that service is required for your vehicle. Operating conditions such as frequent short-trips, trailer tow, extended engine idle time, extremely hot or cold ambient temperatures will influence when the "Oil Change Required" message is displayed. Severe Operating Conditions can cause the change oil message to illuminate as early as 3,500 miles (5,600 km) since last reset. Have your vehicle serviced as soon as possible, within the next 500 miles (805 km).

NOTE:

Under no circumstances should oil change intervals exceed 10,000 miles (16,000 km), 350 hours of engine run time or twelve months, whichever comes first. The 350 hours of engine run or idle time is generally only a concern for fleet customers.

Severe Duty All Models

Change Engine Oil at 4,000 miles (6,500 km) if the vehicle is operated in a dusty and off road environment or is operated predominately at idle or only very low engine RPM's. This type of vehicle use is considered Severe Duty.

Oil Change Indicator- Reset

- Unless reset, this message continues to display each time you turn the ignition switch to the ON/RUN position. To turn off the message temporarily, press and release the Menu button. To reset the oil change indicator system (after performing the scheduled maintenance) perform the following procedure:
 - Turn the ignition switch to the "ON" position. Do not start the engine.
 - Fully press the accelerator pedal slowly three times within ten seconds.
 - Turn the ignition switch to the "LOCK" position.

NOTE:

If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary, repeat this procedure.

Once A Month Or Before A Long Trip:

- Check engine oil level
- Check windshield washer fluid level
- Check the tire inflation pressures and look for unusual wear or damage
- Check the fluid levels of the coolant reservoir, brake master cylinder, power steering and fill as needed
- Check function of all interior and exterior lights

At Every Oil Change Interval As Indicated By Oil Change Indicator System:

- Change oil and filter.
- Rotate the tires. **Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on.**
- Inspect battery and clean and tighten terminals as required.
- Inspect brake pads, shoes, rotors, drums, hoses and park brake.
- Inspect engine cooling system protection and hoses.
- Inspect exhaust system.

- Inspect engine air cleaner if using in dusty or off-road conditions.

Maintenance Chart

Mileage:	20,000	30,000	40,000	50,000	60,000	70,000	80,000	90,000	100,000
Or Years:	2	3	4	5	6	7	8	9	10
Or Kilometers:	32,000	48,000	64,000	80,000	96,000	112,000	128,000	144,000	160,000

Additional Inspections

Inspect the CV joints.	X		X		X		X		X
Inspect front suspension, boot seals, tie rod ends, and replace if necessary.	X		X		X		X		X
Inspect the brake linings, parking brake function.	X		X		X		X		X
Inspect front accessory drive belt, tensioner, idler pulley, and replace if necessary.									

Additional Maintenance

Replace engine air cleaner filter.		X			X			X	
	X		X		X		X		X

Mileage:	20,000	30,000	40,000	50,000	60,000	70,000	80,000	90,000	100,000
Or Years:	2	3	4	5	6	7	8	9	10
Or Kilometers:	32,000	48,000	64,000	80,000	96,000	112,000	128,000	144,000	160,000
Replace air conditioning/cabin air filter. *									
Change brake fluid every two years. **	X		X		X		X		X
Replace spark plugs. ***									X
Flush and replace the engine coolant at 10 years or 150,000 miles (240,000 km) whichever comes first.									X
Inspect and replace PCV valve if necessary.									X

* Change engine air filter every 10,000 miles (16,000 km) if operated in dusty and off road environment.

** The brake fluid must be changed every 24 months. This interval is time based only, mileage intervals do not apply.

*** The spark plug change interval is mileage based only, yearly intervals do not apply.